



BY-WM4 PRO RXD/R XU

 
2.4GHz Wireless Receiver

2.4GHz无线接收器

BY-WM4 PRO RXD

For iOS devices

Receiver

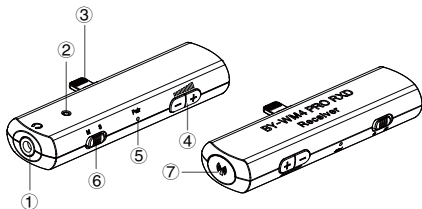

1. Headphone Jack

(3.5mm diameter stereo mini jack)

To monitor the receiver output, connect the headphones to this connector.



NOTE:

Do not connect headphones with a monaural mini jack.

This may lead to short-circuiting of the headphone output, resulting in distorted sound output.

2. Power LED

For more details about LED indicator, please refer to as following:

Status	Receiver	Transmitter
The transmitter and the receiver connects.	The indicator won't light up until you turn on the audio/video app.	Flashes continually every 2.5 seconds.
The transmitter and the receiver disconnects.	Flashes continually every 1 second.	Flashes continually every 1 second.
Receiver unit is turned OFF(Transmitter is still ON)	Off	Flashes in blue
Transmitter unit is turned OFF(Receiver is still ON)	Flashes in blue	Off
Low power	/	Flashes in red
The transmitter and the receiver waits for pairing	Flashes quickly in blue light	

3. Lightning Connector

4. Volume +/-

Press these buttons to set the attenuation level of the input signal.

5. Pair Bottom

 
For more details, please see "Connecting the transmitter and the receiver" on page 21.

6. M/S Switch

7. Built-In Internal Antenna

Set Up Guide

1. Plug the BY-WM4 PRO RXD directly into the lightning port of smartphone.
2. Open the audio/video app on mobile device, then the indicator of receiver should be light up.
3. The Power LED flashes slowly waiting for connecting with the transmitter.

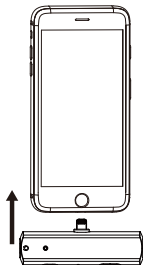


Connecting the transmitter and the Receiver

Before leaving factory, the connection of transmitters and receiver will be established.

If transmitters and receiver disconnect, please follow below steps:

 1. Turn on the transmitter and plug the receiver into smartphone.
2. Long press the pair bottom of receiver with pair pin, the indicator of receiver will flash quickly when entering pairing mode.

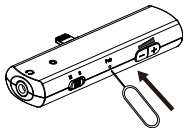

3. Long press the pair button on the side of the transmitter entering the pairing mode.
4. When the transmitter and receiver connected, the light of receiver stays blue, and transmitter flashes every 2.5 seconds.

Otherwise, the light of receiver and transmitter will flash continually every 1 second, then try 1-3 steps again.



 
NOTE:

- 1) Please adjust the monitoring audio volume of BY-WM4 PRO RXD before recording.

BY-WM4 PRO RXU

For Android and other Type-C devices

Receiver

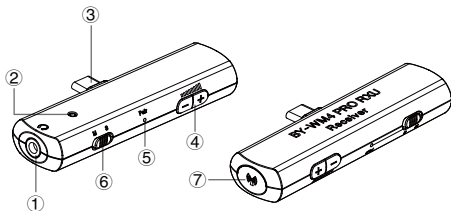

1. Headphone Jack

(3.5mm diameter stereo mini jack)

To monitor the receiver output, connect the headphones to this connector.



NOTE :

Do not connect headphones with a monaural mini jack. This may lead to short-circuiting of the headphone output, resulting in distorted sound output.

2. Power LED

For more details about LED indicator, please refer to as following:

Status	Receiver	Transmitter
The transmitter and the receiver connects.	The indicator won't light up until you turn on the audio/video app.	Flashes continually every 2.5 seconds.
The transmitter and the receiver disconnects.	Flashes continually every 1 second.	Flashes continually every 1 second.
Receiver unit is turned OFF(Transmitter is still ON)	Off	Flashes in blue
Transmitter unit is turned OFF(Receiver is still ON)	Flashes in blue	Off
Low power	/	Flashes in red
The transmitter and the receiver waits for pairing	Flashes quickly in blue light	

3. USB Type-C Connector

4. Volume +/-

Press these buttons to set the attenuation level of the input signal.

5. Pair Bottom

 
For more details, please see "Connecting the transmitter and the receiver" on page 26.

6. M/S Switch

7. Built-In Internal Antenna

Set Up Guide

1. Plug the BY-WM4 PRO RXU directly into the lightning port of smartphone.
2. The Power LED flashes slowly waiting for connecting with the transmitter.

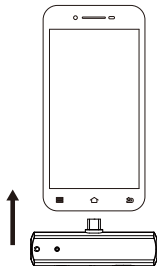


Connecting the transmitter and the Receiver

Before leaving factory, the connection of transmitters and receiver will be established.

If transmitters and receiver disconnect, please follow below steps:

 1. Turn on the transmitter and plug the receiver into smartphone.
2. Long press the pair bottom of receiver with pair pin, the indicator of receiver will flash quickly when entering pairing mode.

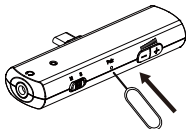

3. Long press the pair button on the side of the transmitter entering the pairing mode.
4. When the transmitter and receiver connected, the light of receiver stays blue, and transmitter flashes every 2.5 seconds.

Otherwise, the light of receiver and transmitter will flash continually every 1 second, then try 1-3 steps again.



NOTE:

- 1) Please adjust the monitoring audio volume of BY-WM4 PRO RXU before recording.

Specifications:

Modulation:	GFSK (Gauss Frequency Shift Keying)
Frequency Band:	2.4GHz (2405-2478MHz)
Antenna:	PIFA antenna
Plug:	BY-WM4 PRO RXU: USB Type-C Connector BY-WM4 PRO RXD: Apple MFi Certified Lightning Connector
Operating Range:	Up to 60m (197ft) without obstacle
Power Requirements:	BY-WM4 PRO RXU: Supplied by USB Type-C Connector BY-WM4 PRO RXD: Supplied by iOS device
Dimensions:	BY-WM4 PRO RXU: 82×30.7×12mm (3.2×1.2×0.5") BY-WM4 PRO RXD: 82×30.7×12mm (3.2×1.2×0.5")
Weight:	BY-WM4 PRO RXU: 9.5g (0.3oz) BY-WM4 PRO RXD: 12g (0.4oz)

接收器 (BY-WM4 PRO RXD)(iOS 设备专用)

1. 监听孔/耳机插孔

(3.5毫米立体声迷你插孔)
请将耳机插入接口，监听接收器输出音频。

 


注意：

- 请勿使用单声道耳机连接
- 这可能会导致耳机输出短路，导致声音输出失真。

2. Power LED

有关LED指示灯的更多详细信息，请参阅以下内容：

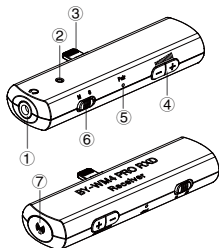

情况	接收器	发射器
接收器和发射器连接	闪蓝光	每隔2.5秒慢闪一次
接收器和发射器断开连接	每隔1秒慢闪一次	每隔1秒慢闪一次
接收器关闭（发射器开启）	关闭	闪蓝光
发射器关闭（接收器开启）	闪蓝光	关闭
低电量	闪红光	
发射器和接收器等待配对	闪蓝光	

3. Lightning接口

4. 音量键-/+

调节输入电平大小

5. 配对键

该键用于连接信号

更多详情，请参照第45页“如何连接接收器和发射器”

6. 单声道/立体声切换键

7. 天线

 
 
如何使用

1. 将BY-WM4 PRO RXD直接插入Lightning iOS 设备上。
2. 然后打开移动设备上的音频/视频app，接收机指示灯亮蓝灯。
3. 电源指示灯缓慢闪烁等待连接发射机。

连接发射机和接收机

出厂前，发射机与接收机连接好。
如果发射机和接收机断开，请按以下步骤操作：

1. 打开发射机，将接收机连接到智能手机上。
2. 用长按接收机的配对键，接收器指示灯会快速闪烁，进入配对模式时。
3. 长按对侧的按钮发射机进入配对模式。
4. 当发射机和接收机连接时，接收器的光保持蓝色，发射器闪烁每2.5秒。否则，接收器和发射器的光将每1秒持续闪烁一次，然后再试1-3步。

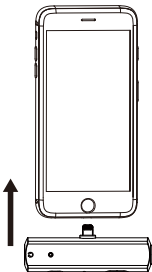

注意：

- 1) 请调整RXD的监控音频音量之前的记录。

接收器 (BY-WM4 PRO RXU)(安卓/Type-C设备专用)

1. 监听孔/耳机插孔

(3.5毫米立体声迷你插孔)
请将耳机插入接口，监听接收器输出音频。



注意：

- 请勿使用单声道耳机连接
- 这可能会导致耳机输出短路，导致声音输出失真。

2. Power LED

有关LED指示灯的更多详细信息，请参阅以下内容：

情况	接收器	发射器
接收器和发射器连接	闪蓝光	每隔2.5秒慢闪一次
接收器和发射器断开连接	每隔1秒慢闪一次	每隔1秒慢闪一次
接收器关闭（发射器开启）	关闭	闪蓝光
发射器关闭（接收器开启）	闪蓝光	关闭
低电量	闪红光	
发射器和接收器等待配对	闪蓝光	

3. Type-C接口

4. 音量键-/+

调节输入电平大小

 
5. 配对键

该键用于连接信号

更多详情，请参照第45页“如何连接接收器和发射器”

6. 单声道/立体声切换键

7. 天线

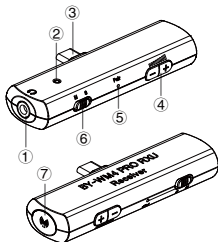



如何使用

1. 将BY-WM4 PRO RXU直接插入Type-C接口设备上。
2. 电源指示灯缓慢闪烁等待连接发射机。

连接发射机和接收机

出厂前，发射机与接收机连接好。如果发射机和接收机断开，请按以下步骤操作：

  1. 打开发射机，将接收机连接到智能手机上。
2. 用长按接收机的配对键，接收器指示灯会快速闪烁，进入配对模式时。
3. 长按对侧的按钮发射机进入配对模式。
4. 当发射机和接收机连接时，接收器的光保持蓝色，发射器闪烁每2.5秒。否则，接收器和发射器的光将每1秒持续闪烁一次，然后再试1-3步。

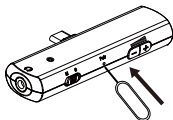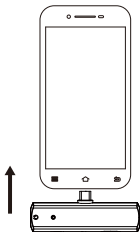

注意：

- 1) 请调整RXU的监控音频音量之前的记录。

产品参数

射频调制:	高斯频移键
频段:	2.4GHz (2405-2478MHz)
操作范围:	60m (无障碍距离)
电源类型:	BY-WM4 PRO RXD: iOS 设备供电
	BY-WM4 PRO RXU: USB Type-C 设备供电
接口:	BY-WM4 PRO RXD: 苹果 MFi 认证 Lightning 接口
	BY-WM4 PRO RXU: USB Type-C 接口
尺寸:	BY-WM4 PRO RXD: 82×30.7×12mm
	BY-WM4 PRO RXU: 82×30.7×12mm
重量:	BY-WM4 PRO RXD: 12g
	BY-WM4 PRO RXU: 9.5g

www.boya-mic.com

SHENZHEN JIAYZ PHOTO INDUSTRIAL., LTD.

The BOYA logo is a trademark which is registered and owned
by Shenzhen Jiayz Photo Industrial., Ltd.

COPY RIGHT 2010-2020

深圳市长丰影像器材有限公司

地址:广东省深圳市龙华区观澜街道大富社区硅谷动力智能终端产业园A16栋

TEL: 400 6131096

Email: sales@boya-mic.com

www.boya-mic.com / www.jiayz.com